



## Parts List for 9820 Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
1	903128	PINION	1
4	903133	SWITCH	1
53	903630	SS/A-GEARBOX/CLUTCH	1
53	903129	CLUTCH RING	1
57	000000-00	No Longer Available	1
83	000000-00	No Longer Available	1
100	903132	SCREW	10
101	897046	SPRING CLIP	2
103	889199	SCREW-CHEESE HD	10
104	000000-00	No Longer Available	1
105	000000-00	No Longer Available	1
106	000000-00	No Longer Available	1
107	888993	SCREW	10
108	891352	RELEASE BUTTON	1
109	891353	SPRING	10
110	892955	CLIP	10
111	000000-00	No Longer Available	1
112	000000-00	No Longer Available	1
113	903214	TRANSFORMER	1
114	903213	CIRCUIT BOARD	1
115	000000-00	No Longer Available	1
116	000000-00	No Longer Available	1
117	000000-00	No Longer Available	10
118	000000-00	No Longer Available	1
119	895781	WASHER	10
121	895517	DRIVER BIT	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.

## Parts List for 9820 Type 1

Item Number	Part Number	Description	Qty Required
122	000000-00	No Longer Available	1
123	887712	LATCH CARRYING CASE	1
125	8924	UNIVERSAL CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.