



SERVICE PARTS LIST

VACUUM CLEANER

Catalog No. **8916**

Starting Serial No. **SERIES 1**


BUL. 54-05-0375

REVISED BUL. DATE
May '76


WIRING INSTRUCTIONS

FOR CAT. NO. 8916-2 (230V) VACUUM CLEANER USE:
23-20-0140 MOTOR

FIG.	PART NO.	DESCRIPTION	NO. REQ.
1	22-64-0700	Cord Set	1
2	44-76-0020	Cord Protector	1
4	23-66-0870	Switch	1
5	42-92-0350	Motor Cover Assembly (Includes Fig. Nos. 6 thru 9)	1
6	43-62-0510	Handle	1
7	43-44-0335	Gasket	1
8	42-86-0070	Connector	1
9	45-03-0120	Perforated Aluminum Screen	1
10	42-04-0440	Motor Adapter	1
11	43-44-0360	Motor Top Gasket	1
12	23-30-0100	Small By Pass Motor Assembly	1
13	—	Carbon Brush and Holder (Set) Refer to bottom of page	1
14	43-44-0390	Motor Gasket	2
15	42-92-0270	Container Cover with Screen	1
16	49-90-0270	Wire Frame	1
17	49-90-0260	Cloth Filter and Gasket	1
18	49-90-0150	Swivel End Connector (incl. fig. 19)	1
19	43-44-0275	Fitted Gasket	1
20	42-51-0360	Stainless Steel Dust Container Assy. (Includes Fig. Nos. 21 thru 29)	1
21	42-60-0090	Chain	1
22	42-52-0230	Drain Cap (includes fig. 23)	1
23	43-44-0275	Fitted Gasket	1
24	42-86-0070	Connector	1
25	43-44-0335	Gasket	1
26	42-86-0080	Inlet Connector Assembly	1
27	43-44-0370	Gasket	1
28	42-68-0290	Holddown Clamp	3
29	43-62-0520	Push Handle	1
30	49-90-0250	Tool Caddy Bag	1
31	49-90-1610	Wet Pick-up Conversion Pan Assy. (Incl. Fig. Nos. 32 thru 35)	1
32	42-46-0110	Float Cage Assembly	1
33	44-54-0050	Wet Pan Adapter	1
34	43-44-0340	Shut Off Gasket	1
35	43-44-0330	Gasket	1
36	06-85-2000	12 x 1/2 Phillips type B Pan Hd. Screw	6
37	43-08-0150	Dolly Ring Body	1
38	45-94-0130	Wheel	2
39	06-57-7505	Pal Nut	2
40	42-52-0220	Hub Cap	2
41	45-94-0140	Swivel Bearing Caster	2
42	06-05-0010	Ground Screw Assembly	1
43	49-90-0301	Filter Bags (Package of Five) Not Shown	

 

22-18-0430

 

22-18-0530

