



CONTACT PLATE ASSY.

WIRING DIAGRAM

Parts List for 9826 Type 1

Item Number	Part Number	Description	Qty Required
1	891236	MOTOR	1
2	891238	PINION	1
4	894852	SWITCH	1
53	891239	GEAR BOX/CLUTCH ASSY	1
54	891242	CLUTCH RING	1
57	903882	HANDLE SET	1
83	891237	KEYLESS CHUCK	1
100	894098	SCREW	10
101	897046	SPRING CLIP	2
103	897120	SCREW	10
104	000000-00	No Longer Available	1
105	000000-00	No Longer Available	1
106	891244	SPEED SLECTOR	1
107	888993	SCREW	10
108	891352	RELEASE BUTTON	1
109	891353	SPRING	10
110	892955	CLIP	1
111	5140070-56	19.2V BATTERY	1
111	5140070-56	19.2V BATTERY	1
111	000000-00	No Longer Available	1
112	901562	BATTERY TOP	1
113	903213	CIRCUIT BOARD	1
114	000000-00	No Longer Available	1
114	8924	UNIVERSAL CHARGER	1
115	000000-00	No Longer Available	1
116	000000-00	No Longer Available	10
117	000000-00	No Longer Available	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 9826 Type 1

Item Number	Part Number	Description	Qty Required
118	895781	WASHER	10
119	903214	TRANSFORMER	1
120	903209	CARRYING CASE	1
121	887712	LATCH CARRYING CASE	1
122	895517	DRIVER BIT	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.