 
 


866

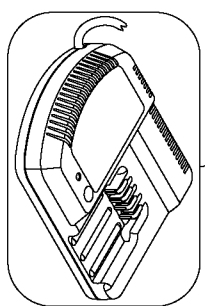

871

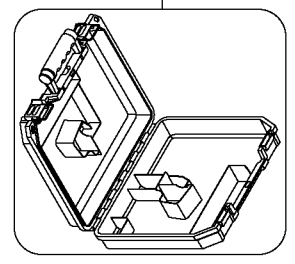

861

Parts List for PC180DK-2 Type 1

Item Number	Part Number	Description	Qty Required
1	90542494	DRILL	1
2	90535667	KEYLESS CHUCK	1
3	5103096-01	SCREW	1
4	90530641	ACTUATOR FWR/REV	1
861	90532919	KIT BOX	1
866	PC18B	BATTERY PACK	2
866	90543485	18V BATTERY	1
871	90550550-02	CHARGER	1
871	90545445	CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.