



SERVICE PARTS LIST


BULLETIN NO.
55-06-2925

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
13mm DRILL			Mar. 2002
CATALOG NO. 0300-50	STARTING SERIAL NO. 070A	WIRING INSTRUCTION 58-03-1805	

00
0

EXAMPLE:

Component Parts
(Small #) Are Included
When Ordering The
Assembly (Large #).

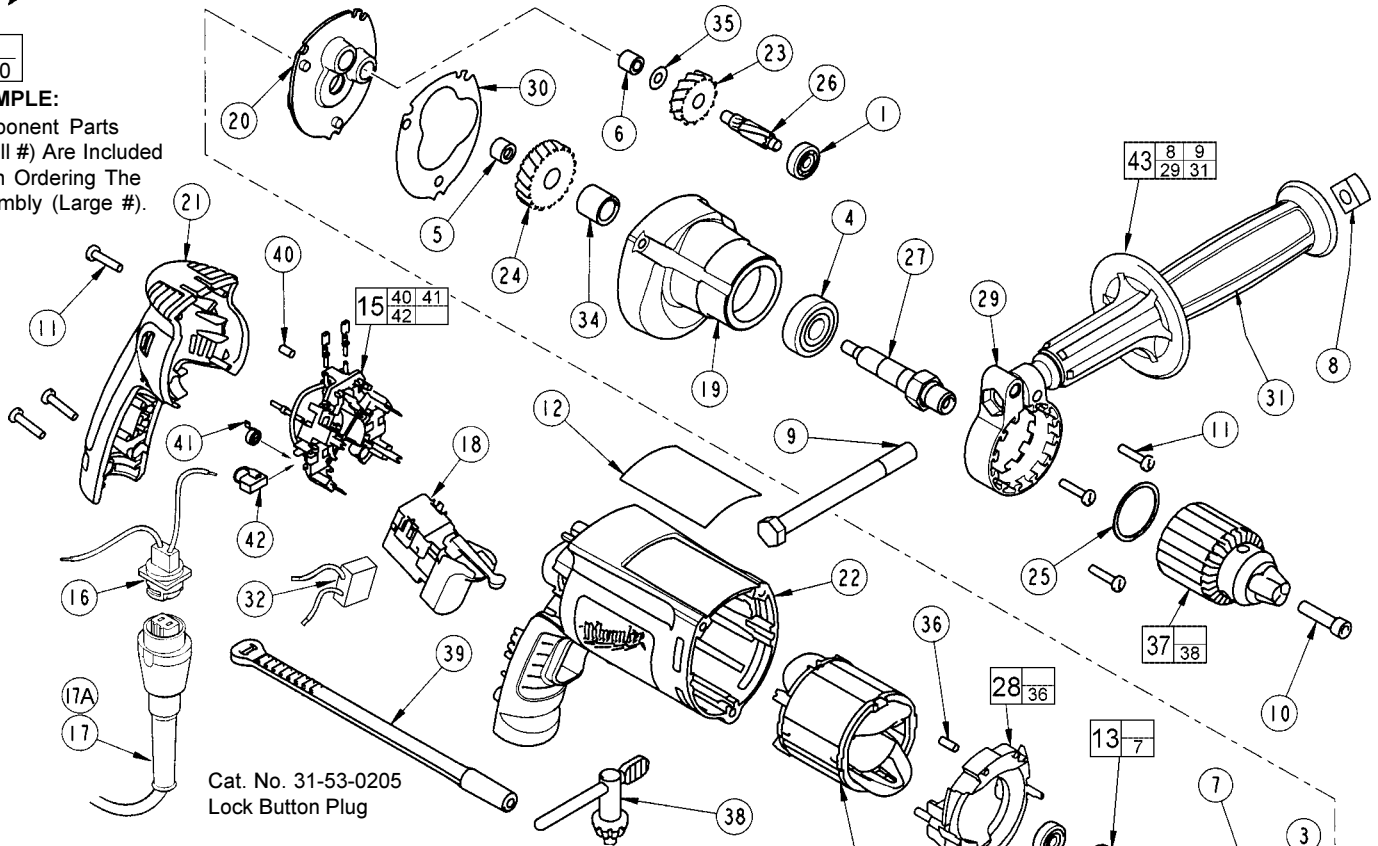

Cat. No. 31-53-0205
Lock Button Plug

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	02-04-0640	Ball Bearing	(1)
2	02-04-0645	Ball Bearing	(1)
3	02-04-0852	Ball Bearing	(1)
4	02-04-1229	Ball Bearing	(1)
5	02-50-1611	Needle Bearing	(1)
6	02-50-2400	Needle Bearing	(1)
7	22-84-0845	Fan	(1)
8	06-54-0325	3/8-16 Square Nut	(1)
9	06-75-2850	3/8-16 x 5-1/2 Hex Cap Screw	(1)
10	06-75-3150	1/4-20 x 1 L.H. Thread Sit. Screw	(1)
11	06-82-7275	7-18 x 3/4 Slotted Plastite T-20	(6)
12	12-99-2679	Service Nameplate	(1)
13	16-14-2210	Armature	(1)
14	18-04-2205	Field	(1)
15	22-18-1220	Brush Card Assembly	(1)
16	22-56-1015	Blade Housing Assembly	(1)
17	48-76-5012	Quik-Lok Cord Set	(1)
17A	22-64-0684	Quik-Lok Cord Set (Australia)	(1)
18	23-66-2135	Switch	(1)
19	28-14-2390	Gearcase	(1)
20	28-28-2320	Diaphragm	(1)
21	31-15-2030	Handle Half	(1)
22	31-50-2030	Motor Housing	(1)
23	32-40-0100	Intermediate Gear	(1)
24	32-75-0100	Spindle Gear	(1)
25	34-80-2300	Retaining Ring	(1)
26	36-66-0100	Intermediate Shaft	(1)
27	38-50-5735	Spindle	(1)
28	42-14-0450	Baffle Assembly	(1)
29	42-68-0800	Side Handle Clamp	(1)
30	43-44-0985	Gasket	(1)
31	43-62-0845	Side Handle	(1)
32	22-33-0550	Suppressor	(1)
34	45-36-1095	Spindle Spacer	(1)
35	45-88-7990	Thrust Washer	(1)
36	45-30-0030	Slug	(2)

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
37	48-66-1355	13mm Chuck	(1)
38	48-66-3280	Chuck Key	(1)
39	48-66-4040	Chuck Key Holder	(1)
40	45-30-0035	Slug	(1)
41	23-52-1610	Brush Spring	(2)
42	22-18-1320	Brush Assembly	(2)
43	49-15-0265	Side Handle Assembly	(1)

FIG. LUBRICATION:

19 Place .11 oz. (3.1 grams) of type "Y" grease, No. 49-08-5270, on top of the inserted intermediate ball bearing. After inserting pinion assembly, place .52 oz. (14.7 grams) of grease at the armature pinion location in the gearcase pocket and push down .20".

Before assembly, lightly coat all press fit areas with type "Y" grease.

FIG. NOTES:

4,24 Support the output ball bearing inside the gearcase before pressing off the spindle gear.

5,6 Needle bearings to be pressed flush to .010 under flush from the end which has the vendors identification.

MILWAUKEE ELECTRIC TOOL CORPORATION
13135 W. LISBON RD., BROOKFIELD, WI 53005